


Tools Required


- 1/8" Allen Wrench (not included)
- 5/32" Allen Wrench (not included)
- 3/16" Allen Wrench (not included)
- 1/2" Wrench (not included)

Installation

- Remove Red Lever from old strap using 1/8" Allen Wrench and Glide Bar Spacer circled in blue using 5/32" Allen Wrench.
- Remove Glide Bar Spacer by unbolting one Flat Head Screw using 5/32" Hex Wrench.
- Unbolt Strap Assembly from Bent arm using 3/16" Hex Wrench and 1/2" Wrench and slide old Strap Assembly off Glide Bar.
- Slide Replacement Strap Assembly onto Glide Bar and reinstall Glide Bar Spacer.
- Flip strap 180° to tension spring and reinstall Strap to Bent Arm using supplied hardware. Once fully tightened, loosen 1/2 turn.
- Reinstall Red Lever.

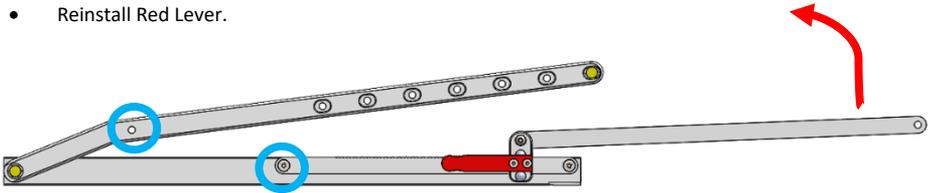

Driver Side Tray

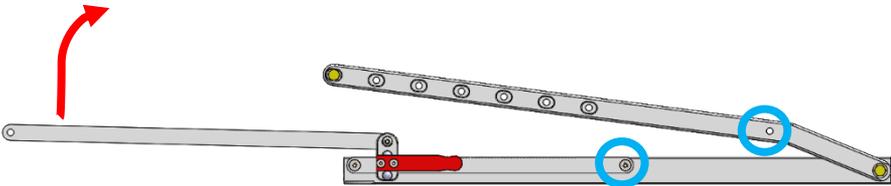

Passenger Side Tray

Additional Instructions

- Remove road debris off nuts and bolts to prevent corrosion.
- Inspect hardware on Rack periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Rack finish. Please use caution when cleaning vehicle and/ or Rack.

Questions or comments? Contact our support team via email at email@1up-usa.com