




2.5" HITCH ADAPTER (OFFSET)


In the Box:

- 2.5" Hitch Adapter
- 3/8-16 x .875" SHSS

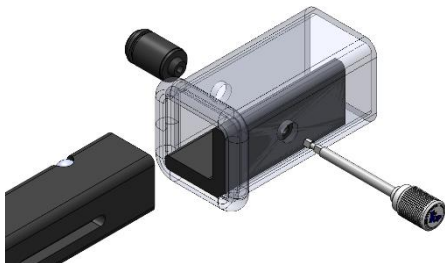

Tools Required:

- 3/16" Allen Wrench

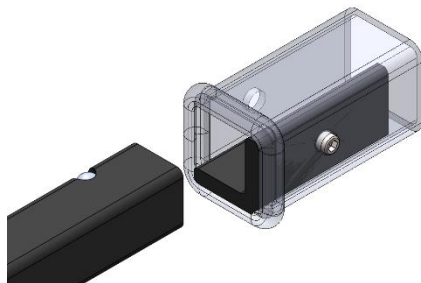

For racks with slotted hitch bar follow installation instructions below.

- Insert 2.5" Hitch Adapter into receiver, tapped hole to be on vertical leg. (See picture above for part orientation.)
- Align tapped hole of 2.5" Hitch Adapter with hole on side of receiver.
- Thread 3/8-16 x .875" SHSS into tapped hole of 2.5" Hitch Adapter until resistance is felt.
- Insert rack into receiver to desired location. Tighten security bolt on rack.
- Remove 3/8-16 x .875" SHSS.
- Insert 1/4 turn lock through hole of receiver, 2.5" Hitch Adapter, and slot of hitch bar locking rack to vehicle.

For racks without slotted hitch bar follow installation instructions below.

- Insert 2.5" Hitch Adapter into receiver, tapped hole to be on vertical leg. (See picture above for part orientation.)
- Align Tapped hole of 2.5" Hitch Adapter with hole on side of receiver.
- Thread 3/8-16 x .875" SHSS into tapped hole of 2.5" Hitch Adapter until resistance is felt.
- Insert rack into receiver to desired location. Tighten security bolt on rack.

Additional Instructions

- **NOT rated for towing.**
- Use **caution** while taking steps to install 2.5" Hitch Adapter.
- Inspect 2.5" Hitch Adapter periodically to ensure proper working conditions.

Questions or comments? Contact our support team via email at email@1up-usa.com



HITCH ADAPTER (EXPANDABLE SLEEVE)



In the Box:

- Hitch Adapter
- Hardware Packet


Step 1:

- Remove Hitch Adapter from packaging and thread socket heads into Hitch Adapter.
- Place two halves together, ensuring socket heads align into opposing half.




Step 2:

- Insert Hitch Adapter into vehicle receiver, ensuring slot aligns with receiver pin hole. If difficult to insert loosen socket heads to collapse Hitch Adapter.
- Use provided 5/16" Allen Wrench to evenly tighten socket heads until Hitch Adapter is snug in receiver.

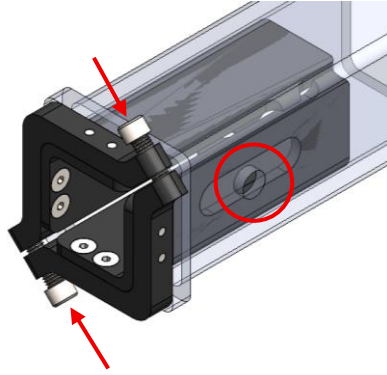

Step 3:

- Insert Rack into Hitch Adapter. If difficult to insert Rack into Hitch Adapter loosen socket heads until rack inserts freely, retighten socket heads once inserted.
- Ensure Rack's anti-wobble is NOT inserted past end of Hitch Adapter.
- Tighten Rack's anti-wobble and insert hitch lock.

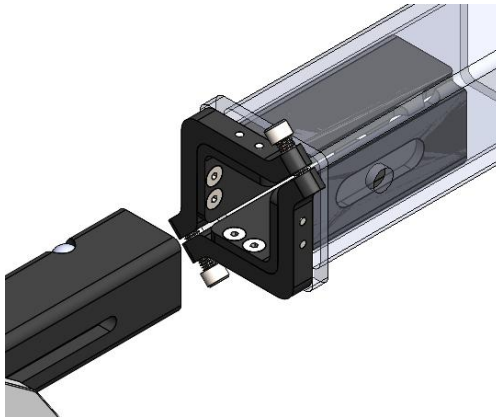

Additional Instructions

- **NOT rated for towing.**
- Remove road debris off bolts to prevent corrosion.
- Inspect hardware on Accessory periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Accessory finish. Please use caution when cleaning vehicle and/or Accessory.

Questions or comments? Contact our support team via email at email@1up-usa.com