


In the Box:

- Tread Block
- Hardware Packet

Step 1:

- Align Tread Block with mounting holes on Fixed Arm.
- Tighten using supplied Wrench and 5/16"-18 Flat Heads.

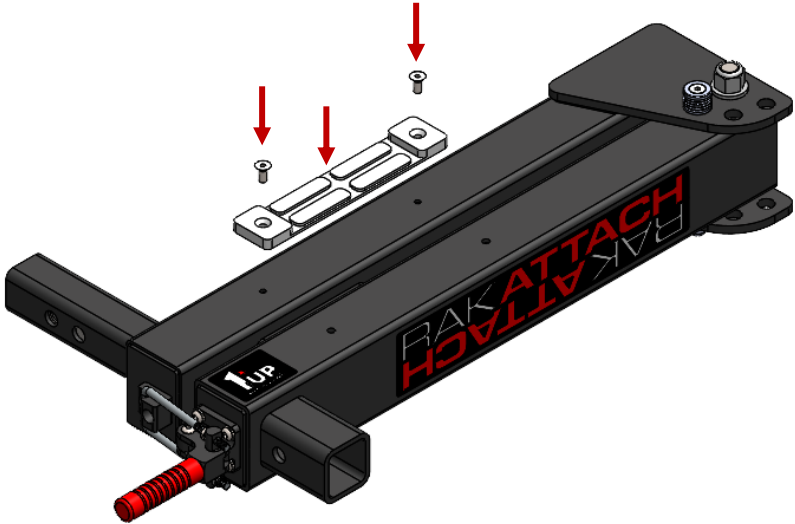

Additional Instructions

- Remove road debris off nuts and bolts to prevent corrosion.
- Inspect hardware on Accessory periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Accessory finish. Please use caution when cleaning vehicle and/or Accessory.

Questions or comments? Contact our support team via email at email@1up-usa.com