


Tools Required

- 7/16" Wrench (not included)
- 9/16" Wrench (not included)
- 9/16" Socket and Ratchet (not included)

Installation

- Remove Standard Wheel Basket using 9/16" wrench and 9/16" socket and ratchet. Keep Wheel Basket mounting hardware as it will be reused.
- Install new Fat Bike Wheel Basket in same orientation as Standard Wheel Basket.
- Suggested mounting location to be far right bike spot. Far right determined from back of vehicle.
- Place Fat Bike Wheel Catch underneath Lower Horizontal. (Part orientation shown below.)
- Insert provided Carriage Bolts through square holes of Fat Bike Wheel Catch and holes of Lower Horizontal. Square of Carriage Bolt to seat in square of Fat Bike Wheel Catch.
- Thread provided nuts onto Carriage Bolts, use 7/16" Wrench to tighten nuts firmly.

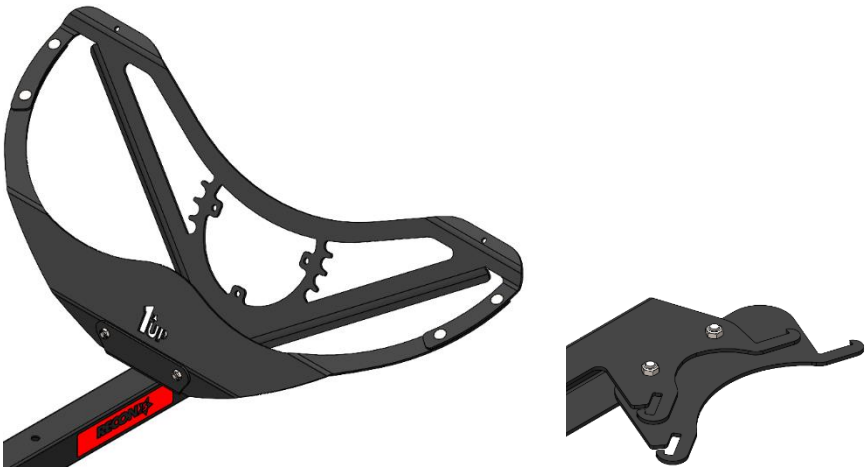

Additional Instructions

- Remove road debris off nuts and bolts to prevent corrosion.
- Inspect hardware on Rack periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Rack finish. Please use caution when cleaning vehicle and/or Rack.

Questions or comments? Contact our support team via email at email@1up-usa.com