



In the Box:

- Side Panel(s)
- Mounting Brackets
- Hardware Packet

Tools Required:


- 3/16" Allen Wrench (Included)
- 1/2" Wrench

Product Notes:

- Weight Capacity: 75 lbs per Side Panel


Step 1:

- Insert 5/16"-18 Flat Heads through Mounting Bracket, Vertical, and into opposing Mounting Bracket.
- Tighten using supplied 3/16" Allen Wrench.

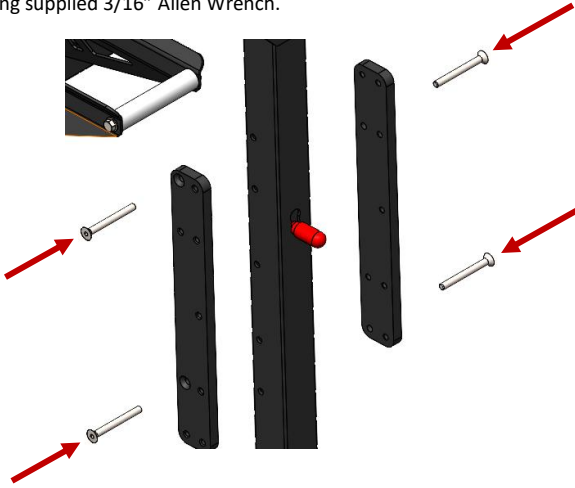

Step 2:

- Insert 5/16"-18 Hex Bolts and 5/16" Washers through Side Panel and into Mounting Bracket.
- Tighten using 1/2" Wrench.
- Repeat for additional Side Panel if applicable.

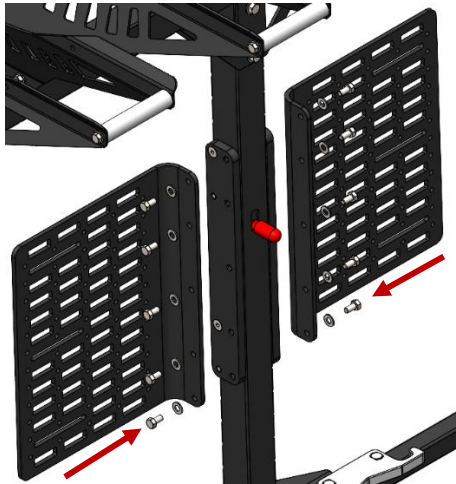

Additional Instructions

- Remove road debris off nuts and bolts to prevent corrosion.
- Inspect hardware on Rack periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Rack finish. Please use caution when cleaning vehicle and/ or Rack.

Questions or comments? Contact our support team via email at email@1up-usa.com