

In the Box:

- Tray Assembly
- Add-On Frame Assembly
- Hardware Bag
- Security bolts

Tools Required:

- 9/16" Wrench

Product Notes:

- Only compatible with XD Rack
- Fits up to 5.25" wide tire.
- Weight rating are as follows:
 - First Add-On – 120 lbs.
 - Second Add-On – 75 lbs.
- Maximum two Add-Ons per Rack.


Assembling the Add-On

Step 1:

- Remove Add-On Frame Assembly and Tray Assembly from boxes.
- Remove all packaging from assemblies.


Step 2:

- Place Tray Assembly on 15 Degree Plate with Domino facing out.
- Insert 3/8-16 x 1.75" hex bolts through Tray and 15 Degree Plate.
 - Ensure middle 3 holes are used on Tray.
 - Ensure bolts are fully seated in Tray channel.

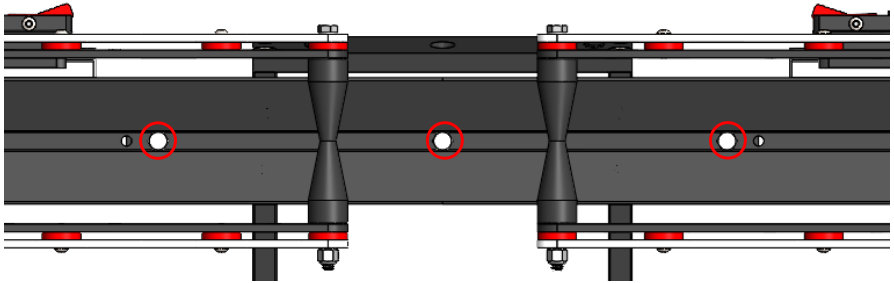

Step 3:


- Place 3/8" washer and nut on each bolt.
- Use 9/16" wrench to tighten.

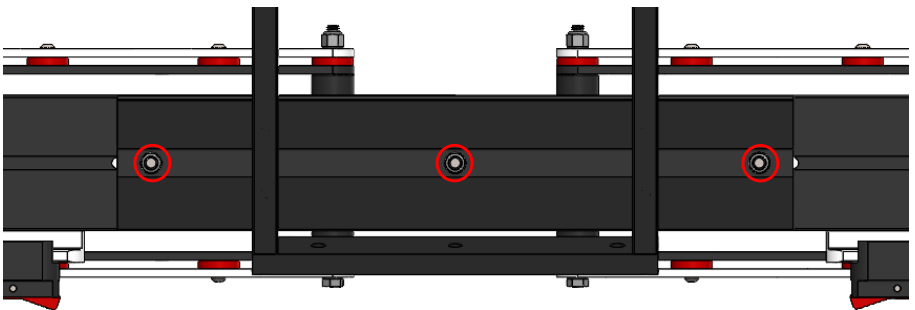

Installing Add-On


Step 1:

- Remove Cap Plugs from Rack Tap Plate.
- Partially thread Security Bolts into Tap Plate on Rack.
- Align Keyhole Plate on Add-On with Security bolts and key into place.

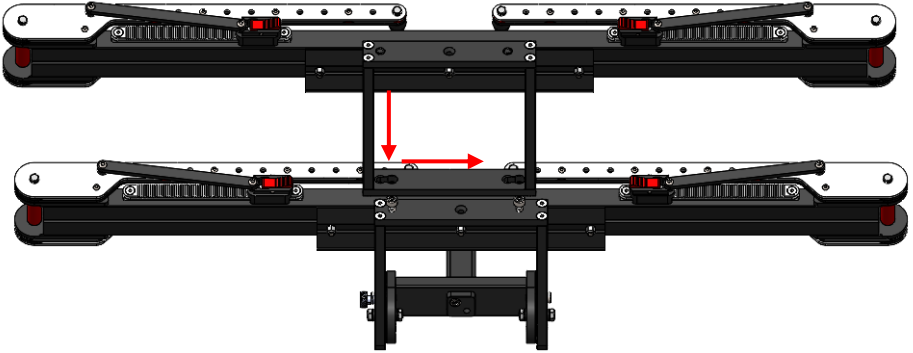

Step 2:


- Tighten Security Bolts.

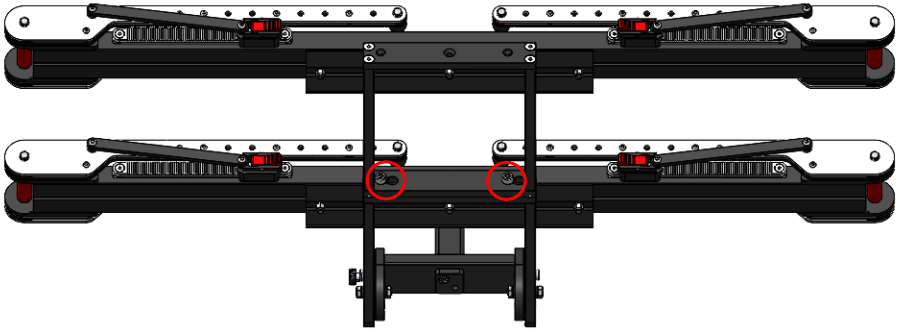

Loading Bikes

Step 1:

- Depress Domino Button and lift on bent arm.

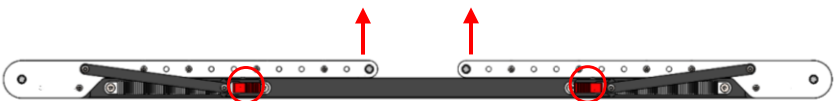

Step 2:

- Place bike centered on tray.
- Press Bent Arms down into tires firmly.



Unloading Bikes

Step 1:

- Compress Bent Arms into tires and depress Domino Button.
- Pull Bent Arms back and remove bike.
- Pivot Bent Arms down to closed position.

Additional Instructions

- Remove road debris off nuts and bolts to prevent corrosion.
- Inspect hardware periodically to ensure proper working conditions.
- Certain car wash chemicals may damage Accessory finish. Please use caution when cleaning vehicle and/or Accessory.

Questions or comments? Contact our support team via email at email@1up-usa.com